

Control Hub - Overview

Control Hub

- Is attached to robot.
- Communicates with Driver Hub via WiFi (paired).
- Sends messages to Control Hub.
- Controls robot based on code downloaded by code writer.
-
- Hard wire connection to Laptop
 - For updates using REV Hardware Client program installed on Laptop.
 - Download and install JavaBlock
 - Write code to download to the Control Hub.

Laptop must be
Windows based.

