

Driver Hub - Overview

Driver Hub

- Not attached to robot.
- Communicates with Control Hub via WiFi (paired).
- Displays messages from Control Hub.

Driver Hub I/O

- Three USB 2.0 ports ... two for Gamepad connections, plus one spare.
- One USB C port ... can be used to connect to a laptop.
- One Ethernet port ... can be hard wire to an Ethernet connection.
- Simplest ... use an Ethernet WiFi signal. After paired, connects automatically when powered on.

Laptop must be
Windows based.



Driver Hub Updates

- 1: Charge the Battery.
- 2: Connect to Ethernet WiFi signal (paired).
- 3: UPDATE ALL via Software Manager (installed on Driver Hub).